

USER'S MANUAL



ECA2

**Environmental
Communications
Adapter**

**Including
Modem
Connections**



Liebert

TABLE OF CONTENTS

1.0	INTRODUCTION	1
2.0	INSTALLATION	1
2.1	POWER CONNECTION	1
2.2	RS-422 CONNECTION(S)	1
2.3	RS-232 CONNECTION	1
2.4	SWITCH SETTINGS	2
3.0	OPERATION	2
3.1	HELP SCREEN	3
3.2	COMMANDS AVAILABLE	4
3.3	PRESENT STATUS COMMANDS	5
3.4	CONTROL COMMANDS	7

ILLUSTRATIONS

ECA2 Connection Diagram	9
-------------------------------	---

1.0 INTRODUCTION

The optional ECA2 (Environmental Communications Adapter) allows a dumb terminal or a PC with an RS-232 port to communicate with Liebert Level 0 and Level 10 microprocessor controllers in environmental units. By accessing the ECA2 board through a modem, users can monitor unit status from a remote location, observe alarms, and change setpoints. A security password can be required for system control, but is not required for status information.

The ECA2 can communicate with up to two Liebert microprocessor boards using RS-422 (proprietary) links. Each RS-422 link is called a channel. The ECA2 converts the data on each RS-422 channel to an RS-232 signal (ASCII) for transmission to a monitor (local or remote). The RS-232 port on the ECA2 connects to the terminal, PC, or modem, and the cable wiring must comply with the application.

The ECA2 board is field installed in the environmental unit electronics control box, wired to a +5 VDC power supply and to the RS-422 (proprietary) port of the microprocessor board. This RS-422 connection is made to channel 1 of the ECA2 board; if you connect a second environmental unit, it must be wired to channel 2 of the ECA2 board.

2.0 INSTALLATION

2.1. POWER CONNECTION

Connect the ECA2 board to a +5 VDC, 1 amp power supply. The ground connection is at P2-4 and the +5 VDC connection is at P2-3. Refer to the connection diagram.

2.2. RS-422 CONNECTION(S)

Connect Channel 1 to a Liebert environmental unit. Connect Channel 2 to a second Liebert environmental unit if this ECA2 board will be monitoring and controlling two units. Refer to the connection diagram. Use a two-wire twisted pair for each RS-422 connection.

2.3. RS-232 CONNECTION

Connect an RS-232 cable (customer supplied) from the modem or terminal to the male 25-pin connector labeled P1 on the ECA2 board. For connection to a modem, the RS-232 cable must be a straight-through cable: pin 2 goes to pin 2, pin 3 to pin 3, etc. For connection to a local terminal or PC, the cable must be a null modem cable: pins 2 and 3 are crossed in the cable, and pins 4 and 5 are crossed also. The connections are:

Pin	Function
2	Data from the ECA2 board.
3	Data to the ECA2 board.
4	RTS out. This signal is high while ECA2 is transmitting. It is low when ECA2 is ready to receive.
5	CTS in. A high on this signal enables the ECA2 to transmit. A low will stop transmission.
7	Ground.

Some devices use CTS to implement flow control (so that data from the ECA2 does not overrun the attached device). If you are using CTS flow control, then CTS must be high from your device before the ECA2 can transmit; if CTS is low, the ECA2 will not transmit. CTS can be ignored by setting DIP switch 3 to ON (see Switch Settings for more information). DTR and DSR are not implemented on the ECA2 RS-232 port. It may be necessary to jumper these lines at the RS-232 port of the device you are using to communicate with the ECA2.

The RS-232 port P1 on the ECA2 uses the following communications settings:

- baud rate: 300, 1200, or 9600
- start bits: 1
- data bits: 8
- stop bits: 1
- parity: none

The RS-232 line is half-duplex (it cannot send and receive data at the same time). The RTS line is high when the channel has data to send, and is low when the channel is ready to receive data from the attached device.

Note that modem or terminal must be set to operate at the same baud rate as the ECA2.

2.4. SWITCH SETTINGS

Eight (8) DIP switches (SW1) and one (1) slide switch (SW2) on the ECA2 are used to make customer selections. Determine your requirements, then set these switches according to the table below.

DIP Switches

1	2	baud
Off	Off	300
On	Off	1200
On	On	9600

- 3 On - ignores the CTS signal
Off - uses the CTS signal
- 4 On - no password required
Off - security password required for some control functions
- 5 Spare - not used
- 6 On - auto alarm polling on channel 1
Off - no alarm polling of channel 1
- 7 On - auto alarm polling of channel 2
Off - no alarm polling of channel 2
- 8 On - auto alarm reporting
Off - no alarm reporting

Slide Switch

- Terminal - ECA2 reads the CTS signal (pin 5) from the RS-232 port
- Modem - Not used. This switch must be in the Terminal position even if your connection is to a modem.

3.0 OPERATION

When the ECA2 board is first powered up or resets, it transmits a message which includes the version of software in this board. Next, the ECA2 checks both RS-422 (proprietary) channels and reports the type of unit connected to each. If no unit is connected or if there is a communications fault, the ECA2 will report NO RESPONSE.

Then it will transmit the prompt 1> to indicate that it is currently communicating with channel 1. The prompt will change to 2> if you are communicating with channel 2.

```
*** LIEBERT ECA2 * RS232 INTERFACE *** (164D)
CHAN 1 LEVEL 10    SOUTH_WALL
CHAN 2 NO RESPONSE
```

1>

Note that most times when you connect to the ECA2, this screen will not appear. Press the Return key to get an INVALID REQUEST message followed by the 1> prompt. Then enter a command or enter HELP for a list of commands.

Most messages are sent directly from the ECA2 to the attached device (local or remote terminal or PC). The ECA2 receives data from the microprocessor and reformats that data before sending it to the device. However, some messages come directly from the microprocessor board and are not reformatted by the ECA2. These messages are preceded with a "u:" to indicate that they come directly from the unit.

Command lines up to 80 characters in length may be sent to the ECA2. Each command line is terminated with a carriage return (usually labeled Enter, Return, or with a left-facing arrow). You can use the backspace key (or ctrl-h) to make corrections at any time before pressing Enter. Press Escape to abort a command.

Commands to the ECA2 can be divided into two types:

1. **Present Status** - display information on the present status of the unit and all setpoint values. Status of the ECA2 can also be reported (ID, communications, and DIP switch settings).
2. **Control commands** - allow you to change channels, define a password, turn unit OFF or ON, change setpoints, and reset the ECA2 board.

You may either type out the entire command, or simply use the first three letters of each word. You should type all commands in upper case because a few commands require it.

3.1. HELP SCREEN

A help screen is available for display at the terminal. This screen lists available commands. Note that some commands are not applicable to Level 0 units.

1>HELP		
SUM	SET	STA
ALA	ALA REV	ALA RES
TEM	HUM	TH
TEM HUM	TEM SET	TEM TOL
HUM SET	HUMTOL	HI TEM ALA
LO TEM ALA	HI HUM ALA	LO HUM ALA
WIN STA DEL	WSK	RES DEL
HUM FLU RAT	CHI WAT FLU CYC	CW FLU CYC
ZER COM HOU	TIM	TEM CAL
HUM CAL	PER	%
HUM STA	DEH STA	COM 1 HOU
COM 2 HOU	GLY HOU	COM CHE
CUS ALA 1	CUS ALA 2	ID
MID SYN	FC	DEG
1	2	CHECK
ONOFF	RESET IF	NAME
OPT	PSW	NEWPSW

3.2. COMMANDS AVAILABLE

The following commands are available on the ECA2. Note that some commands apply to Level 10 units only.

TO OBTAIN

BLOCK of SUMMARY DATA
BLOCK of CONTROL SETPOINTS
BLOCK of STATUS DATA
ALL ALARMS (ALARM BLOCK)
TEMPERATURE READING
HUMIDITY READING
TEMP AND HUM READINGS
TEMPERATURE SETPOINT
TEMPERATURE SENSITIVITY
HUMIDITY SETPOINT
HUMIDITY SENSITIVITY
HIGH TEMPERATURE ALARM
LOW TEMPERATURE ALARM
HIGH HUMIDITY ALARM
LOW HUMIDITY ALARM
POSITIVE START DELAY
RESTART DELAY
HUMIDIFIER FLUSH RATE
CHILLED WATER FLUSH CYCLE
ZERO COMPRESSOR RUN HOURS
TIME
TEMPERATURE CALIBRATION
HUMIDITY CALIBRATION
PERCENT COOLING/HEATING
HUMIDIFIER/DEHUMIDIFIER STATUS
COMPRESSOR #1 RUN HOURS
COMPRESSOR #2 RUN HOURS
GLYCOOL HOURS
COMMUNICATIONS CHECK
ALARM RESET
CUSTOMER ALARM 1
CUSTOMER ALARM 2
IDENTIFY UNIT
MIDNIGHT SYNC
DEGREES

ENTER

* SUM
SET
STA
ALA
TEM
HUM
TH or T H or TEM HUM
TEM SET
TEM TOL
HUM SET
HUM TOL
* HI TEM ALA
* LO TEM ALA
* HI HUM ALA
* LO HUM ALA
* WIN STA DEL or WSK
* RES DEL
HUM FLU RAT
* CHI WAT FLU CYC or CW FLU CYC
* ZER COM HOU
* TIM
* TEM CAL
* HUM CAL
PER or %
HUM STA or DEH STA
* COM 1 HOU
* COM 2 HOU
* GLY HOU
COM CHE
ALA RES
* CUS ALA 1
* CUS ALA 2
ID
* MID SYN
DEG or FC

* Available on Level 10 only

3.3. PRESENT STATUS COMMANDS

The following commands can be used to monitor the status of the unit and the current setpoint values. You may type out the entire command or use the three-letter abbreviation shown.

STATUS (STA)

Displays the current operating status of the Liebert unit.

```
1>STA
COOLING      GLYCOOL OFF
HUM/DEHUM OFF
TEMP READING      73      F
HUM READING      45
% HEAT/COOL      000
STAGES HEAT/COOL      0
DEGREES (F/C)      F
```

TEMPERATURE READING (TEM)

Displays the current room temperature reading. The output of this command is identical to the TEMP READING portion of the STA command.

HUMIDITY READING (HUM)

Displays the current relative humidity of the room. The output of this command is identical to the HUM READING portion of the STA command.

TEMP AND HUM READINGS (TH or T H)

Displays both the current room temperature and relative humidity.

HUMIDIFIER/DEHUMIDIFIER STATUS (HUM STA or DEH STA)

Displays the status (ON or OFF) of the system dehumidifier (and optional steam humidifier, if installed).

SETPOINTS (SET)

Displays the values of all control and alarm setpoints.

```
1>SET
TEMP SETPT      72
TEMP TOL      1.0
HUM SETPT      50
HUM TOL      05.0
HI TEMP ALARM      87
LO TEMP ALARM      62
HI HUM ALARM
```

In this example, the ECA2 is communicating with channel 1 (as indicated by the 1> prompt). The output from the ECA2 indicates that the temperature setpoint (TEMP SETPT) is 72°, the temperature sensitivity (TEMP TOL) 1°, the humidification setpoint (HUM SETPT) is 50%, and the humidity sensitivity (HUM TOL) is 5%.

Note that the temperature values do not indicate whether they are degrees Fahrenheit or Celsius. Use the STA command to determine which temperature scale is selected in the Liebert unit.

SPECIFIC SETPOINT

Each setpoint can be displayed individually by entering the first three letters of each word in the SET screen. For example, TEM SET, HUM SET, TEM TOL, or HUM TOL.

ALARMS (ALA)

The ALA command displays all the alarms (if any) that are presently active in the unit.

```
1>ALA
CHANGE FILTERS
```

This example shows that the only alarm presently active is CHANGE FILTERS.

ALARM RESET (ALA RES)

Alarms will automatically reset when the alarm condition is cleared.

SUMMARY DATA (SUM)

This command is available only for Level 10 units.

1>SUM			
COMP #1 RUN HRS	000000		
COMP #2 RUN HRS	000000		
GLYCOOL HRS	000000		
TEMP READING	73	F	
HUM READING	45		
DAILY HI TEMP	73	F	00:12:23
DAILY LO TEMP	73	F	00:54:23
DAILY HI HUM	45		00:10:00
DAILY LO HUM	45		00:10:00

IDENTIFY UNIT (ID)

Displays the name of the unit on your current channel. The ECA2 displays LEVEL 10 or Level 0 then the channel name (no-name if none entered). You can use the NAME = command, described in the Control Commands section, to enter a descriptive name for your unit.

CHECK

Used to check both ECA2 channels to the Liebert unit(s). Both channels (RS-422, proprietary) will be checked and the type of unit connected will be displayed, followed by the channel name.

1>CHECK			
CHAN 1	LEVEL 10	SOUTH_WALL	
CHAN 2	LEVEL 0	WEST_WALL	

The messages displayed are identical to the channel entry messages seen when using the 1 and 2 commands; however, the CHECK command does not switch channels.

COMMUNICATIONS CHECK (COM CHE)

Performs a diagnostic check of the communications between the microprocessor board and the ECA2 board.

```
1>COM CHE
u: **COMMUNICATION OK**
```

The message ****COMMUNICATION OK**** indicates that the RS-422 link between the microprocessor board and the ECA2 board is functioning properly. The "u:" preceding the message indicates that this message came directly from the Liebert microprocessor board.

OPTIONS (OPT)

The settings of the DIP switches on the ECA2 board are displayed.

```
1>OPT
DIPSW(1-8) = 10101111
```

A 1 indicates that the switch is ON (closed), while a 0 indicates that the switch is OFF (open). In this example switch 1, 3, and 5-8 are on; and switches 2 and 4 are off.

3.4. CONTROL COMMANDS

Control commands allow you to make changes to the Liebert unit(s).

CONNECT TO CHAN 1 (1) CONNECT TO CHAN 2 (2)

This selects (changes) ECA2 channels. Typing 2 at the 1> prompt will select channel two; typing 1 at the 2> prompt will select channel one. If the active channel has been assigned a name, it will be displayed. Refer to the NAME command.

```
1>2
  CHAN 2 LEVEL 0      WEST_WALL
2>
```

In this example the 2 command was used to switch to channel two. This channel was given the name WEST_WALL, and this is displayed when channel two is selected.

PASSWORD

Use DIP switch 4 on the ECA2 board to enable or disable the password function. Refer to 2.4 Switch Settings. If password is selected, the password must be entered before control changes can be made. A password is not required to obtain system status.

PSW = string

Use this command to enter the security password. When password protection is enabled, you must use the PSW = command to enter the password before you can change any of the setpoints. The ECA2 will respond with USE PSW if a password is required but was not entered. String is the password string, which is 3 to 6 characters in length and may include only upper case (capital) letters A through Z, and numbers 0 through 9.

The default password for the ECA2 is LIEBRT. Note that the second E is left out because of the 6 character limit. To provide security for system control, use the NEWPSW = command to change the password for your installation.

The ECA2 will respond with INCORRECT or OK. Once the correct password is entered, you have 60 seconds to change a setpoint. If you make a change, you have 60 seconds to make another one. After any 60 second pause, the ECA2 board will require you to re-enter the password. This keeps your Liebert system secure if you leave your terminal while still connected.

NEWPSW = string

Assigns new security password required for making control changes. Note that DIP switch 4 on the ECA2 board must be Off to enable password protection. Then, enter the NEWPSW = command, replacing string with the new password. Your new password may be 3 to 6 characters in length and may include only upper case (capital) letters A through Z, and numbers 0 through 9.

The password can be changed remotely using the NEWPSW = command, but you must first enter the present password. Use the PSW = command to enter the existing password. Then, use the NEWPSW = command to enter the new password. Do not use a password that can be easily guessed, such as a name or number associated with you or your corporation. Combinations of letters and numbers are difficult to guess. To maintain control of your system, you must also control your password. If the password has been forgotten, local access to the ECA2 is required. Set DIP switch 4 to On, use NEWPSW = to enter a password, then set DIP switch 4 to Off to enable password protection.

NAME = string

Assigns a descriptive name to each ECA2 channel. This name is displayed when you issue an ID or CHECK command, or whenever you change channels. String is a text name, 12 characters maximum, including spaces. Entering one space, followed by a return, will result in a blank name.

For example, the command NAME = WEST_WALL entered at the 2> prompt assigns the name WEST_WALL to channel two.

ON and OFF

These commands turn the Liebert unit on and off. When you issue either command, the ECA2 responds first by telling you the run status of the unit. The run status may be:

- SWITCH OFF (the unit has been turned off with its own ON/OFF switch)
- OFF BY REMOTE CTRL (the unit has been turned off by remote control, through the ECA2 interface)
- ON (the unit is running)

If the run status is SWITCH OFF, then you cannot turn the unit on by remote control. If the run status is OFF BY REMOTE CTRL, the ECA2 board will ask if you want to turn it on. If the run status is ON, the ECA2 board will ask if you want to turn it off.

When using this command the ECA2 reports the present status, then asks if you want to change the status. When asked if you want to change the status (turn the unit on or off), you have 7 seconds to respond YES or NO. If you enter YES then the run status is changed accordingly. The YES must be in upper case (capital) letters. Responding NO leaves the run status unchanged. Any response other than YES, including a 7-second time out, is assumed to be a NO response.

```
1>OFF
UNIT IS ON
TURN OFF? (YES/NO)
1>N
UNIT IS ON
```

In this example the user typed the OFF command. The ECA2 board responded with the run status of the unit (ON) and asked the user to confirm the

off command. The second 1> prompt is the ECA2 board waiting for a YES or a NO from the user. Responding N is interpreted as a NO, and the unit remains on.

CHANGE SETPOINTS

Setpoint change commands allow you to change all mode 1 and mode 2 setpoints in the Liebert unit remotely through the ECA2.

Setpoint change commands include the setpoint, an equal sign, and a value.

"COMMAND = VALUE"

Example: TEM SET = value

Changes the value of the temperature setpoint. Value must be a number representing the new setpoint in degrees. For example, the command TEM SET = 71 changes the temperature setpoint to 71 degrees. The ECA2 automatically reports the new setpoint. Note that if you enter a value that exceeds the allowable range, the ECA2 will not change the setpoint.


RESET INTERFACE BOARD (RESET IF)

The RESET IF command causes a hardware reset of the ECA2 interface board. After approximately 5 seconds the ECA2 board displays the message LIEBERT ECA2 RS-232 INTERFACE followed by four hexi-decimal digits indicating the software version in the board. Note that a reset will occur automatically if DIP switch 3 on the ECA2 board is OFF (monitor CTS) and CTS goes low for longer than 2.5 seconds. If you do not need CTS, set DIP switch 3 on the ECA2 board ON.

MIDNIGHT SYNC (MID SYN)

This command resets the timer on a Level 10 board to 00:00:00.

REV.	DESCRIPTION	DATE	APPROVED

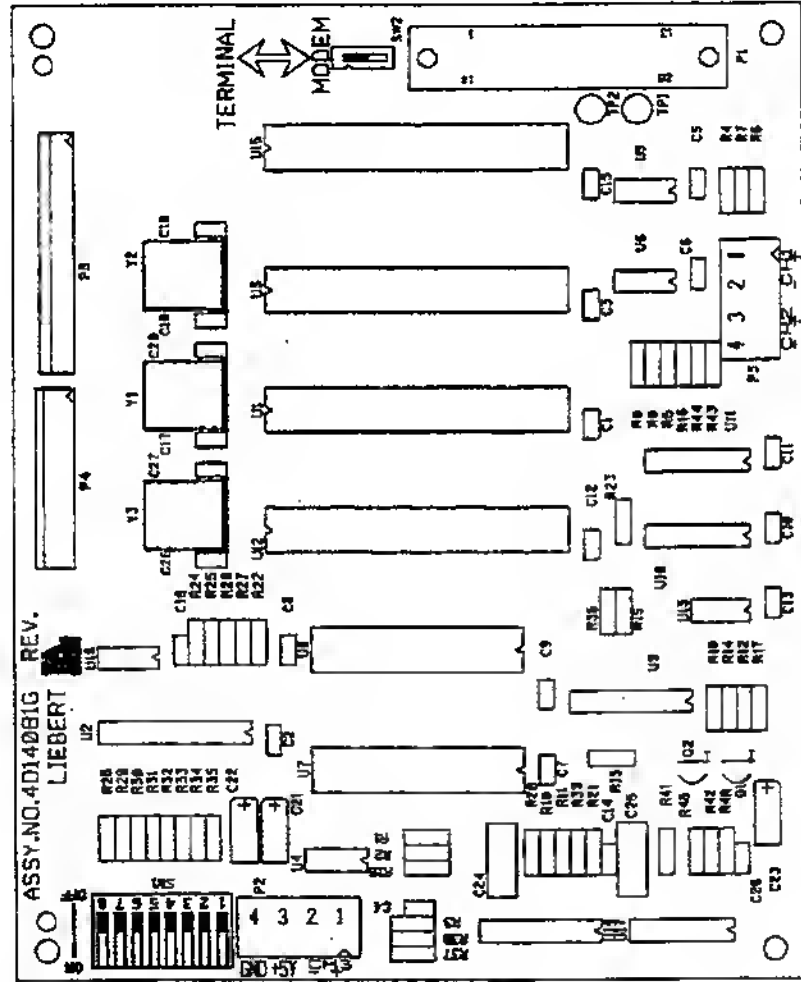

DIP SWITCHES
REFER TO INSTALLATION
INSTRUCTIONS

INPUT POWER
+5 VOC @ 1AMP

SLIDE SWITCH
MUST BE IN
TERMINAL POSITION

RS-232 PORT
REFER TO INSTALLATION
INSTRUCTIONS FOR
CONNECTIONS

RS-422 (PROPRIETARY) PORT
FOR CHANNEL 1 TO LIEBERT
ENVIRONMENTAL UNIT

RS-422 (PROPRIETARY) PORT
FOR CHANNEL 2 TO LIEBERT
ENVIRONMENTAL UNIT

Liebert
ECA2
CONNECTION
DIAGRAM

REV. NO.	55455	DATE	03-05-92	BY	BRUCE MCCORMICK
REV. NO.	55455	DATE	03-06-92	BY	BRUCE MCCORMICK
REV. NO.	55455	DATE	03-06-92	BY	BRUCE MCCORMICK

Liebert


ECA2


User's Manual

Supplement

Use these drawings of the ECA2 enclosure, with or without optional modem, along with the User's Manual (SL-31032).

(3/94)

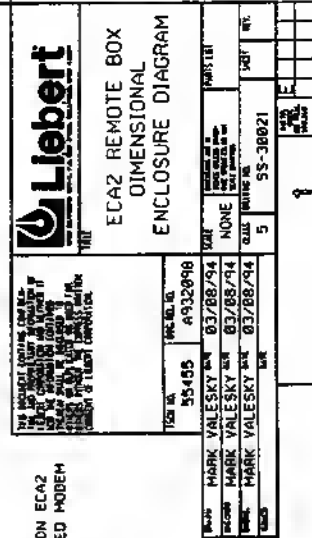

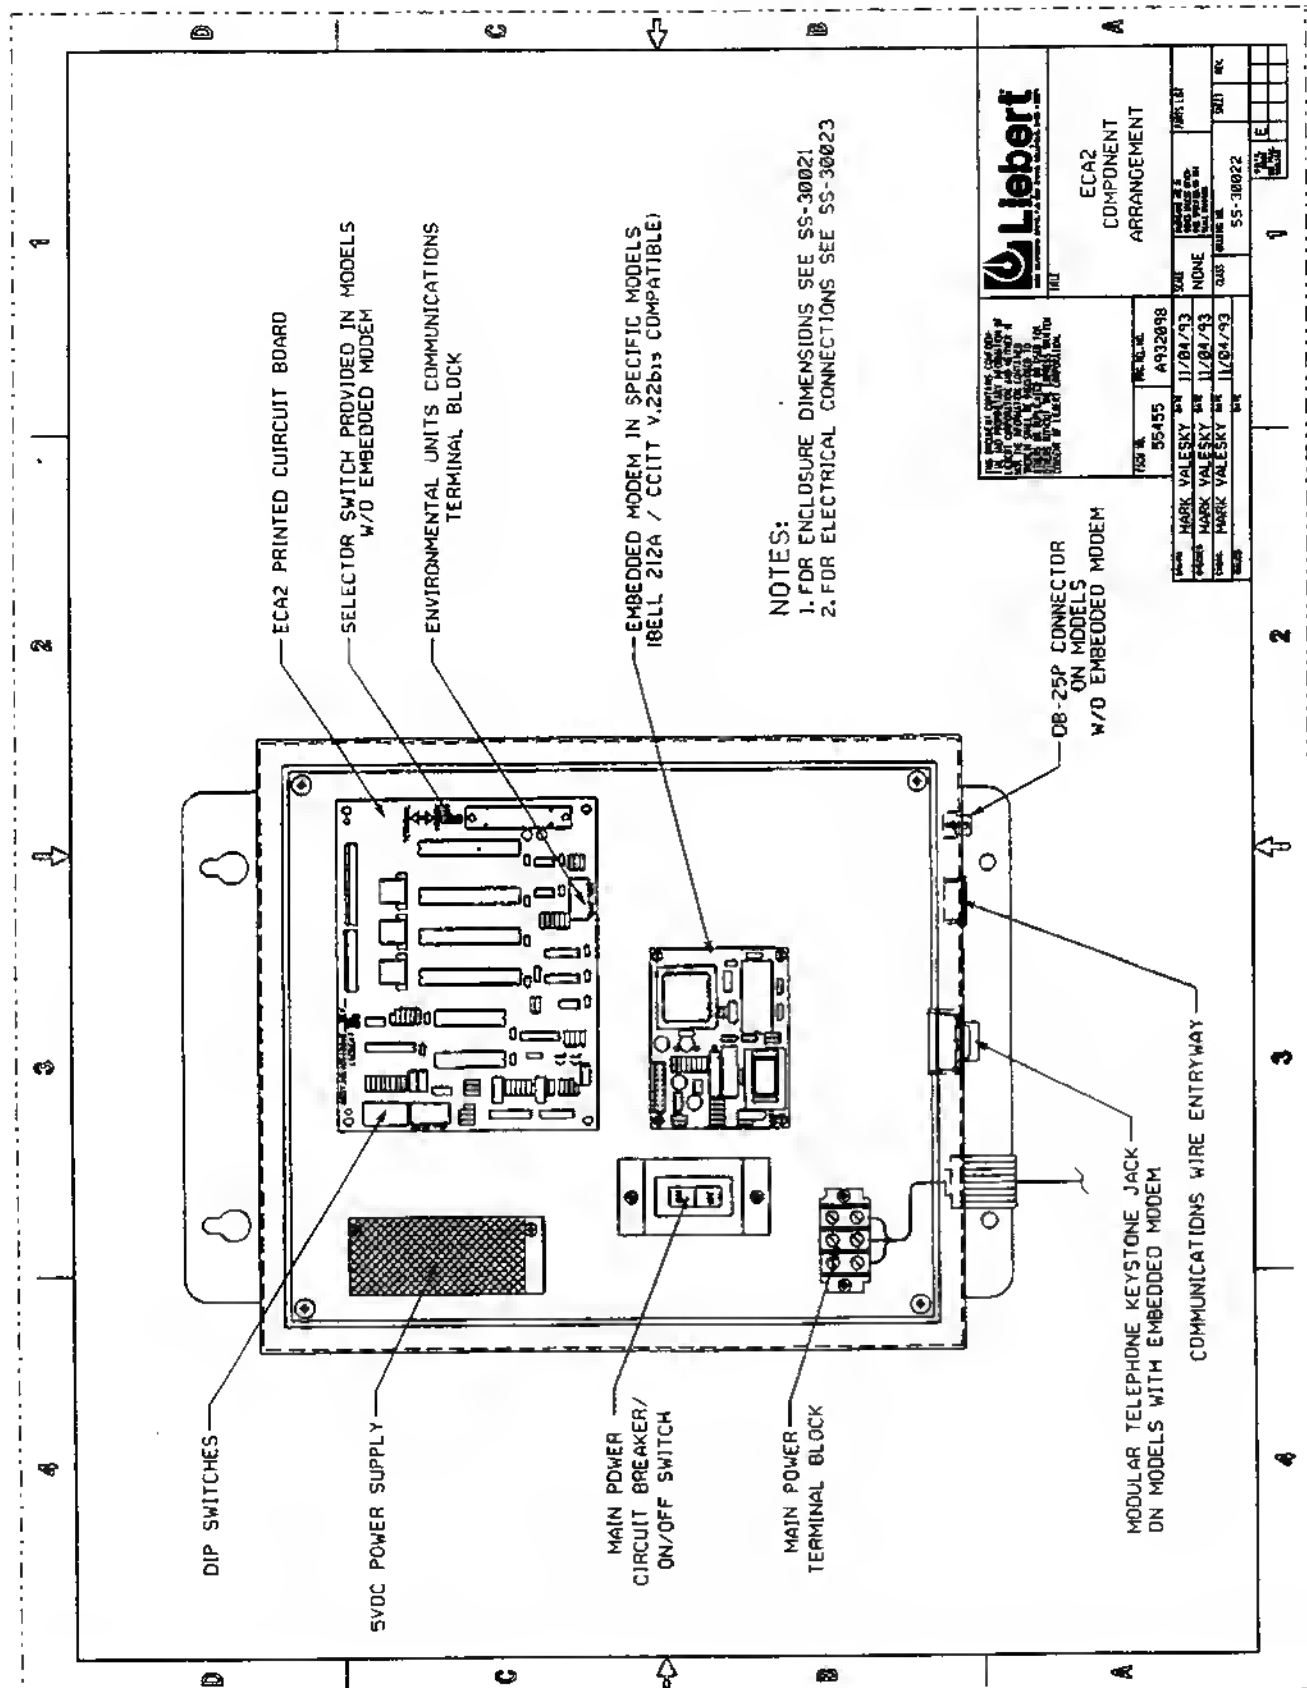

DIP SWITCHES

SVDC POWER SUPPLY

MAIN POWER
CIRCUIT BREAKER/
ON/OFF SWITCH

MAIN POWER
TERMINAL BLOCK

MODULAR TELEPHONE KEYSTONE JACK
ON MODELS WITH EMBEDDED MODEM

COMMUNICATIONS WIRE ENTRYWAY

DB-25P CONNECTOR
ON MODELS
W/O EMBEDDED MODEM

ECA2 PRINTED CIRCUIT BOARD


SELECTOR SWITCH PROVIDED IN MODELS
W/O EMBEDDED MODEM

ENVIRONMENTAL UNITS COMMUNICATIONS
TERMINAL BLOCK

EMBEDDED MODEM IN SPECIFIC MODELS
188ELL 212A / CCITT V.22bis COMPATIBLE)

NOTES:
1. FOR ENCLOSURE DIMENSIONS SEE SS-30021
2. FOR ELECTRICAL CONNECTIONS SEE SS-30023

		ECA2 COMPONENT ARRANGEMENT	
THE MODEL UNITING COMPANY 10000 WILSON AVENUE WILSON, N.J. 07094-1000 (201) 391-1000 FAX (201) 391-1001	PART NO. 55455	REV. NO. A932098	DATE 11/04/93
DESIGNED BY MARK VALESKY	CHECKED BY MARK VALESKY	DATE 11/04/93	DATE 11/04/93
DRAWN BY MARK VALESKY		DATE 11/04/93	
PART NO. 55-30022		DATE 11/04/93	

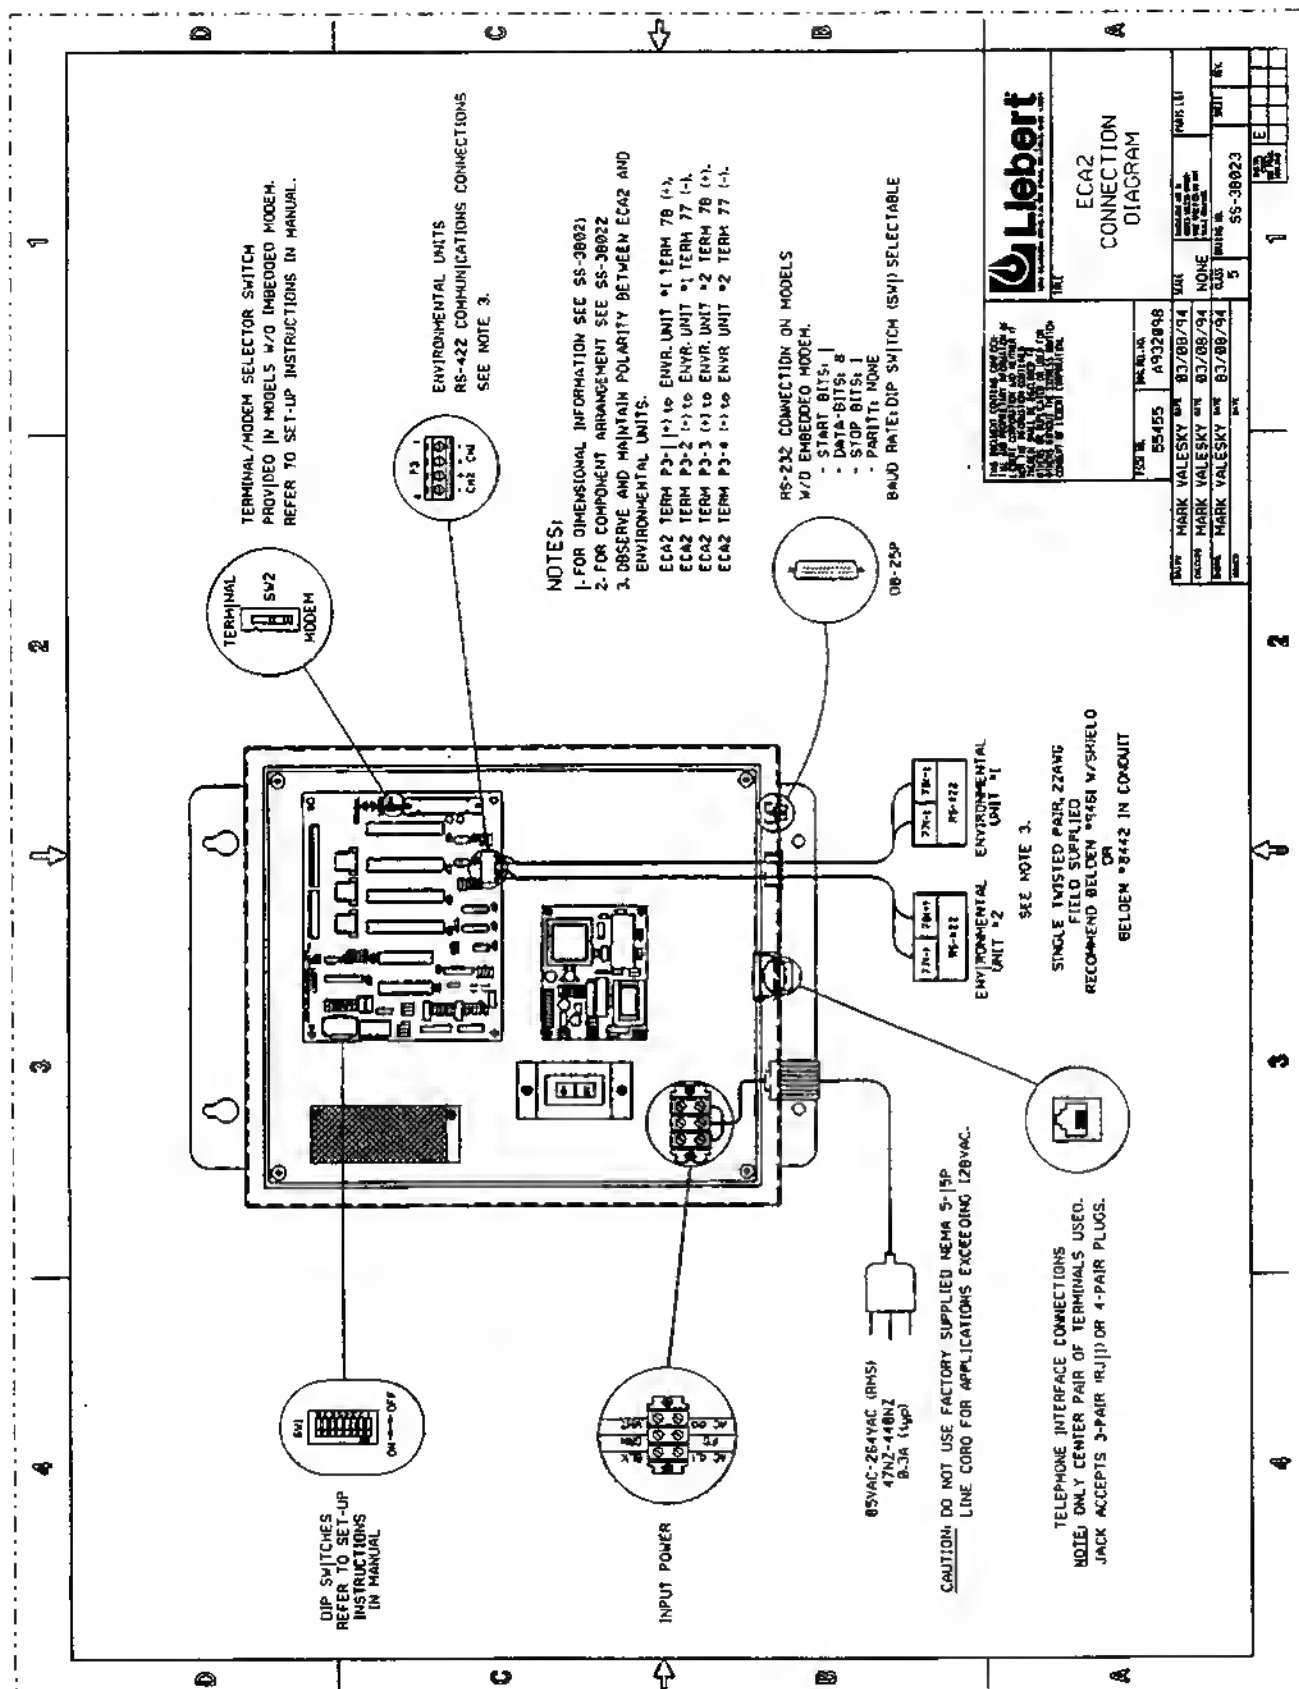

ECA2 CONNECTION DIAGRAM

THIS UNIT IS DESIGNED TO BE USED IN CONJUNCTION WITH THE ECA2 ENVIRONMENTAL UNIT. THE ECA2 ENVIRONMENTAL UNIT IS A SEPARATE UNIT WHICH MUST BE ORDERED SEPARATELY. THE ECA2 ENVIRONMENTAL UNIT IS NOT INCLUDED IN THE PRICE OF THE ECA2 UNIT.

ITEM NO.	DESCRIPTION	QTY	UNIT PRICE	TOTAL PRICE
1	MARK VALESKY	1	83/88/94	
2	MARK VALESKY	1	83/88/94	
3	MARK VALESKY	1	83/88/94	
4	MARK VALESKY	1	83/88/94	
5	MARK VALESKY	1	83/88/94	
6	MARK VALESKY	1	83/88/94	
7	MARK VALESKY	1	83/88/94	
8	MARK VALESKY	1	83/88/94	
9	MARK VALESKY	1	83/88/94	
10	MARK VALESKY	1	83/88/94	
11	MARK VALESKY	1	83/88/94	
12	MARK VALESKY	1	83/88/94	
13	MARK VALESKY	1	83/88/94	
14	MARK VALESKY	1	83/88/94	
15	MARK VALESKY	1	83/88/94	
16	MARK VALESKY	1	83/88/94	
17	MARK VALESKY	1	83/88/94	
18	MARK VALESKY	1	83/88/94	
19	MARK VALESKY	1	83/88/94	
20	MARK VALESKY	1	83/88/94	
21	MARK VALESKY	1	83/88/94	
22	MARK VALESKY	1	83/88/94	
23	MARK VALESKY	1	83/88/94	
24	MARK VALESKY	1	83/88/94	
25	MARK VALESKY	1	83/88/94	
26	MARK VALESKY	1	83/88/94	
27	MARK VALESKY	1	83/88/94	
28	MARK VALESKY	1	83/88/94	
29	MARK VALESKY	1	83/88/94	
30	MARK VALESKY	1	83/88/94	
31	MARK VALESKY	1	83/88/94	
32	MARK VALESKY	1	83/88/94	
33	MARK VALESKY	1	83/88/94	
34	MARK VALESKY	1	83/88/94	
35	MARK VALESKY	1	83/88/94	
36	MARK VALESKY	1	83/88/94	
37	MARK VALESKY	1	83/88/94	
38	MARK VALESKY	1	83/88/94	
39	MARK VALESKY	1	83/88/94	
40	MARK VALESKY	1	83/88/94	
41	MARK VALESKY	1	83/88/94	
42	MARK VALESKY	1	83/88/94	
43	MARK VALESKY	1	83/88/94	
44	MARK VALESKY	1	83/88/94	
45	MARK VALESKY	1	83/88/94	
46	MARK VALESKY	1	83/88/94	
47	MARK VALESKY	1	83/88/94	
48	MARK VALESKY	1	83/88/94	
49	MARK VALESKY	1	83/88/94	
50	MARK VALESKY	1	83/88/94	
51	MARK VALESKY	1	83/88/94	
52	MARK VALESKY	1	83/88/94	
53	MARK VALESKY	1	83/88/94	
54	MARK VALESKY	1	83/88/94	
55	MARK VALESKY	1	83/88/94	
56	MARK VALESKY	1	83/88/94	
57	MARK VALESKY	1	83/88/94	
58	MARK VALESKY	1	83/88/94	
59	MARK VALESKY	1	83/88/94	
60	MARK VALESKY	1	83/88/94	
61	MARK VALESKY	1	83/88/94	
62	MARK VALESKY	1	83/88/94	
63	MARK VALESKY	1	83/88/94	
64	MARK VALESKY	1	83/88/94	
65	MARK VALESKY	1	83/88/94	
66	MARK VALESKY	1	83/88/94	
67	MARK VALESKY	1	83/88/94	
68	MARK VALESKY	1	83/88/94	
69	MARK VALESKY	1	83/88/94	
70	MARK VALESKY	1	83/88/94	
71	MARK VALESKY	1	83/88/94	
72	MARK VALESKY	1	83/88/94	
73	MARK VALESKY	1	83/88/94	
74	MARK VALESKY	1	83/88/94	
75	MARK VALESKY	1	83/88/94	
76	MARK VALESKY	1	83/88/94	
77	MARK VALESKY	1	83/88/94	
78	MARK VALESKY	1	83/88/94	
79	MARK VALESKY	1	83/88/94	
80	MARK VALESKY	1	83/88/94	
81	MARK VALESKY	1	83/88/94	
82	MARK VALESKY	1	83/88/94	
83	MARK VALESKY	1	83/88/94	
84	MARK VALESKY	1	83/88/94	
85	MARK VALESKY	1	83/88/94	
86	MARK VALESKY	1	83/88/94	
87	MARK VALESKY	1	83/88/94	
88	MARK VALESKY	1	83/88/94	
89	MARK VALESKY	1	83/88/94	
90	MARK VALESKY	1	83/88/94	
91	MARK VALESKY	1	83/88/94	
92	MARK VALESKY	1	83/88/94	
93	MARK VALESKY	1	83/88/94	
94	MARK VALESKY	1	83/88/94	
95	MARK VALESKY	1	83/88/94	
96	MARK VALESKY	1	83/88/94	
97	MARK VALESKY	1	83/88/94	
98	MARK VALESKY	1	83/88/94	
99	MARK VALESKY	1	83/88/94	
100	MARK VALESKY	1	83/88/94	

World Headquarters**Liebert Corporation**

1050 Dearborn Drive, P.O. Box 29186

Columbus OH 43229

Telephone: 1-800-877-9222

Facsimile: 614-841-6022

Liebert Europe

Globe Park

Marlow

Bucks SL7 14G

United Kingdom

Telephone: 44-628-403-200

Facsimile : 44-628-403-293

While every precaution has been taken to ensure accuracy and completeness in this manual, Liebert Corporation assumes no responsibility, and disclaims all liability for damages resulting from use of this information or for any errors or omissions.

© 1994, 1992 Liebert Corporation

All rights reserved throughout the world.

Specifications subject to change without notice.

© Liebert and the Liebert logo are registered trademarks of Liebert Corporation. All names referred to are trademarks or registered trademarks of their respective owners.

Printed in U.S.A.

SL-31032 (3/92, Modem Supplement 3/94)



SL-31032